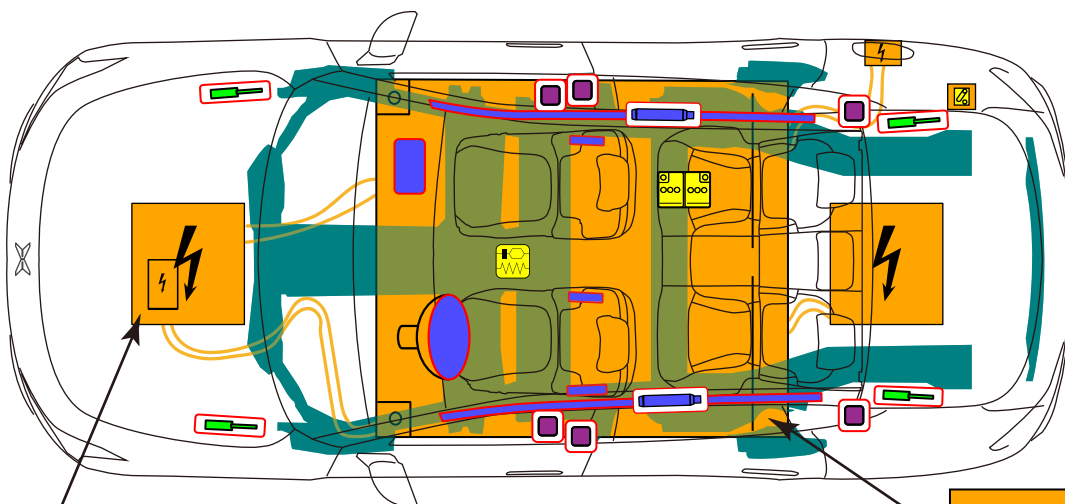


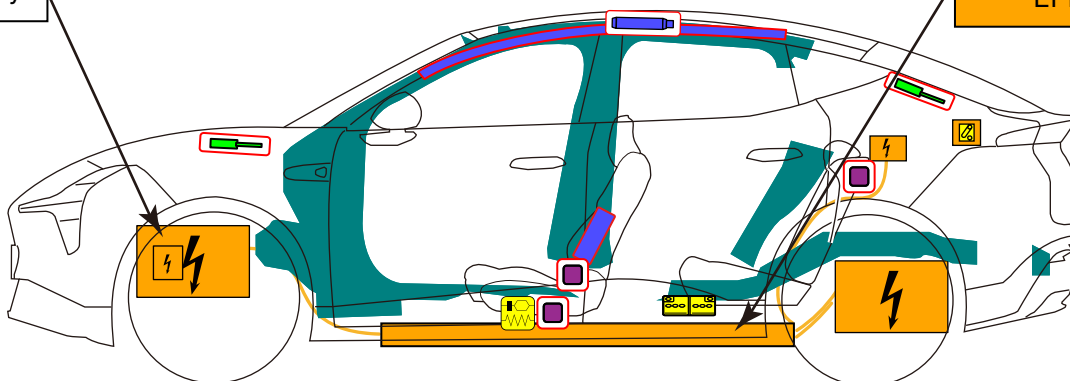


XPENG L03
5 doors / 5 seats / SUV
From 2026



For AWD only

346.68V/423.72V
LFP



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery Low Voltage		Gas strut/Preloaded spring		High strength zone		Low voltage device that disconnects high voltage
	High voltage component		Battery pack, high-voltage		High voltage power cable		



XPENG L03
FROM 2026-PRESENT

ID No.

L1N-L03-2026-ERS

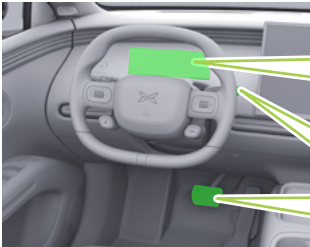
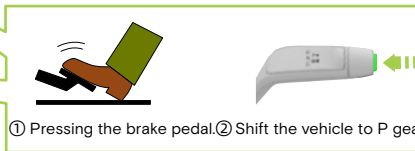
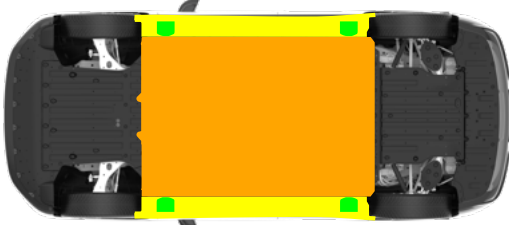
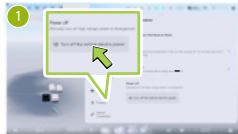
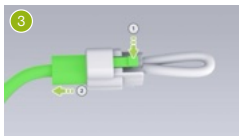
Version No.

01

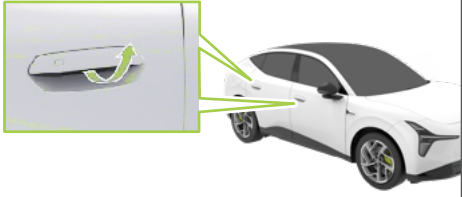
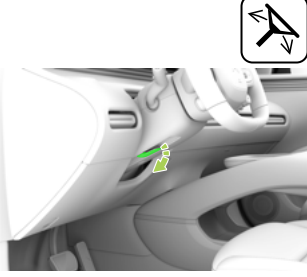
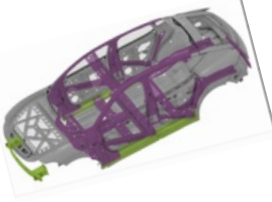
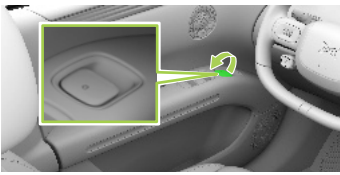
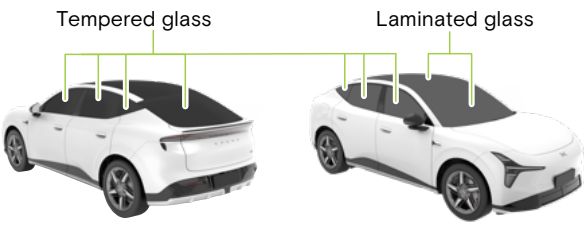
Page No.

1/4

XPENG

	XPENG L03 5 doors / 5 seats / SUV From 2026		
1. Identification / recognition			
 The electric motor is silent. The “READY”indicator light on the instrument cluster indicates that the currentelectric drive system is operational. Wear appropriate personal protective equipment			
			
2. Immobilisation / stabilisation / lifting			
IMMOBILISE THE VEHICLE		LIFTING POINTS	
  ① Pressing the brake pedal.② Shift the vehicle to P gear.	  Appropriate stabilisation-lift- ing points  Appropriate stabilisation points vehicle on side  High voltage battery		
3. Disable direct hazards / safety regulations			
MAIN DISABLING METHOD: Automatic power-off			
	The vehicle is equipped with an automatic power-off function. The high-voltage system is disconnected if you observe deployed airbags or the HV warning icon/message ("Power cut. Please contact service") on the central touchscreen.		
ALTERNATIVE DISABLING METHOD			
	Select "Power Off" in the central touchscreen, that all of the high volatge component in first page will be deactivated.  		
Disconnect the low-voltage maintenance switch, that all of the high volatge component in first page will be deactivated.   			
DISCONNECT 12V BATTERY			
	 		
 Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!			
	XPENG L03 FROM 2026-PRESENT	ID No. L1N-LO3-2026-ERS	Version No. 01
		Page No. 2/4	

4. Access to the occupants

Door opening  Lift the exterior door handle to open the door.	Seat adjustment 	Steering column adjustment 	High strength body areas 
Internal opening of doors  Every door is fitted with a handle; the corresponding door can be opened via the inner handle.	Glass types  Tempered glass Laminated glass		

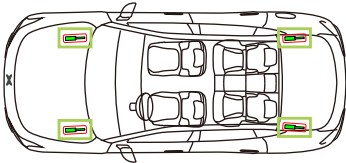
WHEN THE 12V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

5. Stored energy / liquids / gases / solids

		12V
		346.68V/423.72V
		R134a 810g/600g R1234yf 900g/670g

 When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera. 

6. In case of fire

 USE LARGE AMOUNTS OF WATER.	
  BATTERY RE-IGNITION!	 DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY!
 If you observe the warning icon/message ("Battery temperature too high. Please stay away from the vehicle and contact service.") on the central touchscreen, indicates that thermal runaway has occurred, please move away from the vehicle immediately.	 Gas strut/Preloaded spring Risk of missile effect of tailgate

	XPENG L03 5 doors / 5 seats / SUV From 2026		
--	--	---	--

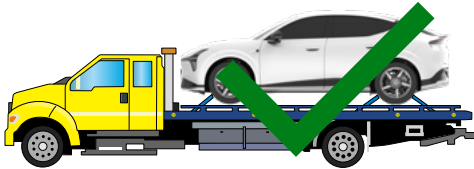
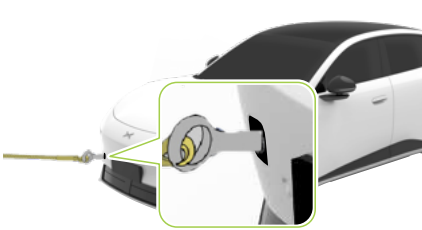
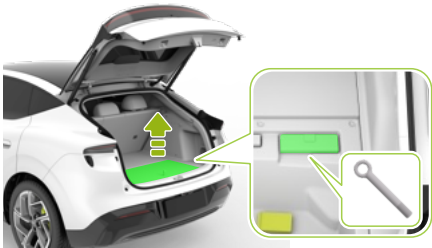
7. In case of submersion

Proper PPE should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).
Tilt the vehicle to one side to allow water to drain out of the vehicle.

8. Towing / transportation / storage

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

Location front hook



Always transport with all four tires off of the ground.



BATTERY RE-IGNITION!



9. Important additional information

First Responder information can be found at <https://tis.xpeng.com>

10. Explanation of pictograms used

	Electric Vehicle		Air-conditioning component		Acute toxicity
	Warning, Electricity		Flammable		Remove smart key
	General warning sign		Hazardous to the human health		Seat height adjustment
	Use water to extinguish the fire		Corrosives		Seat adjustment, longitudinal
	Use thermal Infrared camera		Explosive		Steering wheel, tilt control
	Bonnet		Environmental hazard		Warning; low temperature
	Boot				